

MERCEDES-BENZ SPRINTER / 2007-PRESENT

Passenger Foot Storage

Passenger floor riser compartment



VEHICLE

2007-Present

NCV3 + VS30

SETUP

5 Minutes

Estimated magnetic setup

TOOLS

None

For magnetic installation

**Raise your foot position.
Store the essentials.**

Know your floor riser

One assembled unit. Added comfort, useful storage, and two mounting options.



1 Aluminum opening flap

Lift the lid to reach the integrated storage compartment.

2 Powder-coated steel frame

A durable, corrosion-resistant finish built for everyday use.

3 Integrated magnets

Quick, tool-free mounting. Optional holes also allow bolting to the seat rails.

Fits Mercedes-Benz Sprinter

NCV3

2007-2018

VS30


2019-Present

INCLUDED

1 passenger floor riser assembly with lid, latch, and magnets.

Optional seat rail bolt hardware is not included.

01 Prepare the area

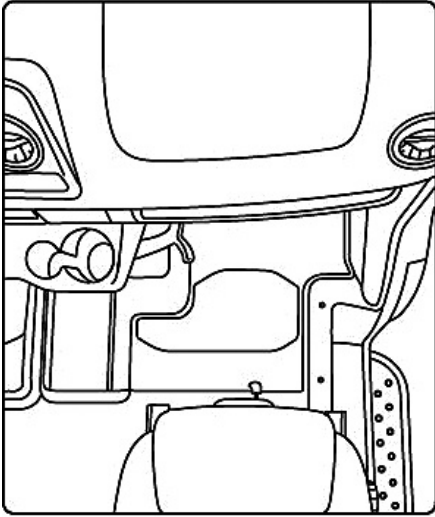

Passenger footwell before installation.

- 1 Park on level ground. Set the parking brake and switch off the ignition.
- 2 Remove floor mats and loose items from the passenger footwell and around the seat base.
- 3 Wipe the floor and magnetic contact surfaces clean. Let them dry, then check for obstructions.

02 Position the floor riser

Place the riser in front of the passenger seat base, as shown.

Face the magnetic mounting side toward the seat base. Keep the lid and latch accessible.

Check that the lid can open without hitting the seat or factory trim.



Installed position reference; latch shown raised.


03

Secure the floor riser

Choose one mounting method, then check that the unit stays in place.



INTEGRATED MAGNETS

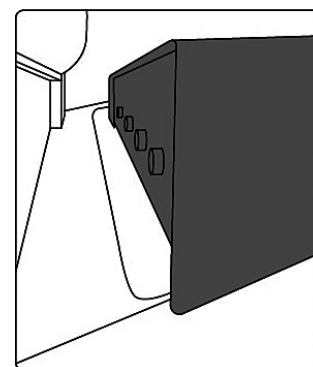

Mounting side faces the passenger seat base.

STANDARD / MAGNETIC MOUNTING

Tool-free installation

Move the riser gently toward the seat base until the magnets engage. Press evenly against the mounting surface. Gently check for rocking or sliding; reposition if needed.

OPTIONAL / SEAT RAIL BOLTS

Permanent mounting

Use the optional mounting holes to bolt the unit to the seat rails. Mounting hardware and tools are not included.

Confirm the correct seat rail fasteners and mounting procedure with Kei Project before bolting. Keep all seat adjustments clear.

04

Check the fit

Check the lid, latch, and passenger seat before using the riser.



A. Release

Press the round button and raise the latch handle.



B. Open

Use the raised handle to release the latch, then lift the lid.



C. Close

Lower the lid, engage the latch, and fold the handle flat.

Before you drive

- ☐ Riser sits level and does not rock, slide, or rattle.
- ☐ Mounting is secure; any optional bolt fasteners are checked.
- ☐ Lid opens freely, closes fully, and latches securely.
- ☐ Passenger seat moves normally; rails and controls remain clear.
- ☐ Factory trim is unobstructed and the installation area is clean.

Keep the lid closed and latched before driving.

Make the space work

Store small gear and essentials. Keep the opening clear.



Storage compartment shown in the passenger footwell.



Shown with our **WOVEN PATH™** FOOTREST STORAGE MAT FOR MERCEDES SPRINTER | CUSTOM-FIT WOVEN POLYVINYL.

Care & maintenance

Clean with mild soap and water. Wipe dry.

Avoid harsh chemicals and abrasive cleaners.

Keep the latch, hinges, and magnetic contact surfaces free of dirt.

Keep gear below the rim

Leave room for the lid to close. Keep items away from the latch and hinges.

Need help with installation?

keiproject.com